

Operating instructions

AG 35



Operating instructions

AG 35



Charge Line



V01



Types: AG 35 positive 115 / 230 V
AG 35 negative 115 / 230 V

Keep in a safe place for future reference!

Contents

- | | |
|------------------------------------|----------------------------|
| 1. Notes on operating instructions | 6. Remedy of defects |
| 2. Safety | 7. Maintenance and repairs |
| 3. Design, operating elements | 8. Technical data |
| 4. Installation | |
| 5. Application | |

1 Notes on operating instructions

In these operating instructions, the AG 35 is also referred to as "the unit".

1.1 Pictorial markings used

In these operating instructions



Caution!
Important instructions!



Danger!
High voltage!
Danger of fatal accidents!
Do not open unit!



Only plug in/unplug coaxial connector
when the unit is switched off!

In the operating instructions and on the unit



Danger!
High voltage!
Danger of fatal accidents!
Do not open unit!



Only plug in/unplug coaxial connector
when the unit is switched off!

2 Safety

The charging generator AG 35 is operationally safe, provided that it is operated in accordance with its intended use.

In case of misuse, dangers may result:

- for life and limb of the operator,
- for the unit and other assets.

Also note Chapter 4.1 (Important installation instructions).

2.1 Intended use

The charging generator AG 35 is intended exclusively for the high voltage supply of HAUG charging electrodes. It generates an adjustable direct high voltage of 0...40 kV, with positive or negative polarity, depending on the unit type.

The direct high voltage is intended for charging material webs in industrial production processes.



The charging generator must not be installed or used in areas subject to explosion hazards.

For reasons of safety, unauthorized conversions and modifications of the unit are not permitted. The installation and operating conditions indicated in these Operating Instructions must be adhered to.

2.2 Danger sources

Defective high voltage terminals and cables may lead to danger of electric shocks. Shut down the unit immediately in case of visible damage and suspected electrical defects.

The charging electrodes connected to the charging generator conduct high voltage during operation. Any contact may lead to injury and consequential accidents. **The operator must provide protective equipment against direct contact when installing the charging electrode!**



***Danger!
High voltage!
Danger of fatal accidents!
Do not open unit!***



Only plug in/unplug coaxial connector when the unit is switched off!

2.3 Installer qualifications

The unit may be installed by trained electricians only. The above mentioned person must have read the operating instructions and must follow the instructions, notes and safety advice.

2.4 Operator qualifications

The unit may be maintained and put into operation by trained electricians only or by authorized persons instructed in the potential dangers. The above mentioned persons must have read the operating instructions and must follow the instructions, notes and safety advice.

3 Design, operating elements

Figure 1

1. Measuring instrument of charging (kVDC)
2. High voltage potentiometer (charging element)

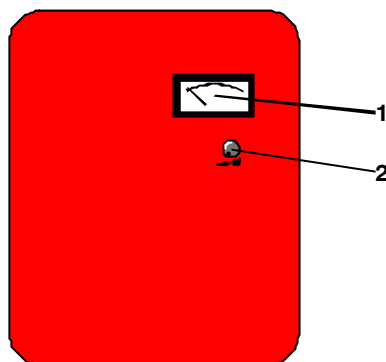


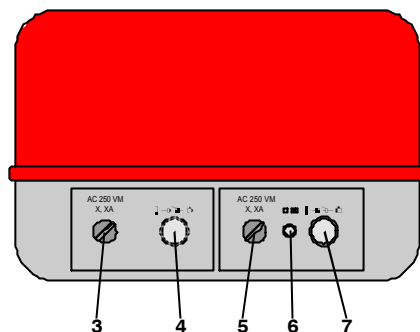
Figure 1

Figure 2**Operating elements charging**

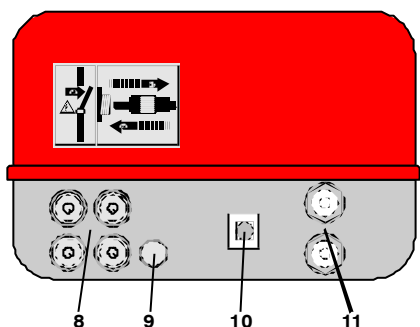
3. Fuse (for replacement see „Maintenance and repairs“)
4. On/Off switch; green lamp lights up when unit is switched on.

Operating elements discharging

5. Fuse (for replacement see „Maintenance and repairs“)
6. Indicator lamp flashes in case of defect.
7. On/Off switch; green lamp lights up when unit is switched on.

**Figure 2****Figure 3**

8. 4 High voltage connection, discharging
9. Mains cable
10. Ground connection
11. 2 High voltage connection, charging

**Figure 3**

4 Installation

The unit may be installed and put into operation by trained electricians only. The above mentioned person must have read the operating instructions and must follow the instructions, notes and safety advice.

4.1 Important installation instructions

The charging electrodes connected to the charging generator carry high voltage during operation. Any contact may lead to injury and consequential accidents. **The operator must provide protective equipment against direct contact when installing the charging electrodes!**

The operation of the charging generator is not affected by the position in which it is installed. However, we recommend installing the unit so that the high voltage terminal points downwards (to protect it from humidity, oil and dirt).

Do not place the charging generator on a surface generating or radiating heat. Avoid installation positions exposed to direct sunlight.

4.2 Setting up, connecting

1. Before connecting always check that the unit is suitable for the local mains voltage (the voltage is indicated on the name plate). The unit will be destroyed if used with wrong mains voltage.
2. Attach unit at the desired location using the enclosed retaining plates.
3. Ensure that the charging generator is switched off (mains switch).
4. Make the cable connections between the charging electrodes and the high voltage connection socket.
5. Connect the PE conductor (green-yellow) with the protective earth of the mains. Connecting the PE conductor via parts of a machine body is insufficient.
6. Connect the charging generator to the mains.
7. Put unit into operation.

Please note in general:



***Only plug in/unplug coaxial connector
when the unit is switched off!***

5 Application

Preconditions:

The charging generator and the charging electrode must be connected correctly.

Protective equipment against direct contact with the charging electrode must be provided.

The unit may be put into operation by trained electricians only or by authorized persons instructed in the potential dangers. The above mentioned persons must have read the operating instructions and must follow the instructions, notes and safety advice.

5.1 Putting into operation

1. Turn high voltage potentiometer to the extreme left (minimum).
2. Switch on the charging and discharging units by switching the On/Off switch to On. The green control lamp in the switch lights up.
3. Set high voltage potentiometer to desired value. The voltage measuring instrument (Fig. 2) will indicate the voltage set.

5.2 Instructions for setting the high voltage

The output voltage depends on the current load. This is why the voltage increases if an existing counter-electrode is covered with insulating material.

If spark-over occurs, please set a lower voltage or increase the distance between the charging electrode and the counter-electrode or the opposing metal parts.

6 Remedy of defects

Any remedy of defects must be carried out by trained electricians only. The above mentioned persons must have read the operating instructions and must follow the instructions, notes and safety advice.

In case of malfunctions in connection with the charging generator, first check its correct installation and fusing (for replacement refers to Section 7.1). If this does not solve the problem, please return the charging generator and the charging electrodes for a check-up.

7 Maintenance and repairs



Danger!
High voltage!
Danger of fatal accidents!
Do not open unit!

This unit does not include any parts which can be maintained or repaired by the operator. HAUG only is authorized to repair or calibrate the unit.

Should the unit prove defective or if a defect is suspected, switch off unit immediately and secure against subsequent reuse.

7.1 Changing the fuse

1. Switch off unit.
2. Determine and remove the cause of the blown fuse.
3. Detach the fuse holder using a screwdriver and lift out.
4. Replace fuse and reattach fuse holder.

Use the following fuses only:

Unit type	Fuse charging	Fuse discharging
115 V pos./neg.	0,50 A slow; 5x20 mm	0,50 A slow; 5x20 mm
230 V pos./neg.	0,25 A slow; 5x20 mm	0,25 A slow; 5x20 mm

The unit type and the rated voltage are indicated on the nameplate.
Only use fuses of the type indicated.

8 Technical data

8.1 Characteristics and specification

Reference temperature 23 °C

Charging

High voltage terminals	2 HAUG high voltage terminals (standard)
High voltage	U = approx. 40 kVDC (no load), positive or negative
Short-circuit current	$I_k \leq 0,8 \text{ mA}$

Discharging

High voltage terminals	4 HAUG X-2000 terminals
High voltage	$U = 7 \text{ kVAC}$
Connected load	max. 18 m (ionization device including high voltage cable).
Short-circuit current	$I_k < 5 \text{ mA}$

8.2 Supply voltage

Type	Nominal value	Operating range	Frequency range	Power input
AG 35 pos./neg.	115 V / 230 V	$\pm 10 \%$	50 - 60 Hz	$P_{\max} = 100 \text{ VA}$

8.3 Ambient conditions

Ambient temperature:

Rated application range
Extreme range for storage and transport

+5 °C to +45 °C
-15 °C to +60 °C

Humidity:

Rated application range
Extreme range for storage and transport

20 % to 65 % RH
0 % to 85 % RH

Air pressure:

Rated application range

800 mbar to 1060 mbar

Vibrations:

Extreme range for storage and transport
Shock:

max. 1,5 g (10 to 55 Hz), 1 h
max. 15 g in each direction

Recommended service position

vertical, supply cable downwards

8.4 Housing

Degree of protection
Protection class
Connection to supply voltage

IP 54
I
approx. 2,6 m fixed on unit

Dimensions:

Height
Width
Depth

approx. 348 mm
approx. 280 mm
approx. 195 mm

Weight

approx. 14 kg

made by



HAUG GmbH & Co.KG

Friedrich-List-Straße 18
D-70771 Leinfelden-Echterdingen
Telefon 07 11 / 94 98 - 0
Telefax 07 11 / 94 98 - 298

www.haug.de

E-Mail: info@haug.de

HAUG Biel AG

Postfach
CH-2500 Biel/ Bienne 6
Johann-Renfer-Strasse 60
CH-2500 Biel/ Bienne 6
Telefon 0 32 / 3 44 96 96
Telefax 0 32 / 3 44 96 97

www.haug.de

E-Mail: info@haug-biel.ch