

GB



®

Operating instructions

Discharging power pack EN 8 SLC

Ident number: 01.7854.000, 01.7854.001, 01.7855.000



Static Line

Keep for future use!



Table of contents

1	Operator instructions	4
1.1	Symbols used in operating instructions	4
1.2	Symbols on the discharging power pack.....	5
2	Safety	6
2.1	Intended use	7
3	Product overview	8
4	Install	9
5	Operate	13
5.1	Normal operation	13
5.2	Operate over the signalling socket K1.....	14
6	Troubleshooting	15
6.1	Replacing fuse.....	16
6.2	Flow chart.....	17
7	Accessories/spare parts	18
8	Technical data	19
8.1	Characteristics and specification.....	19
8.2	Supply voltage	19
8.3	Ambient conditions	20
8.4	Connected lengths.....	21
8.5	Housing.....	21
9	Taking out of operation	22
9.1	Storing.....	22
9.2	Disposing	22

1 Operator instructions

Before installation and commissioning read these operating instruction in full. Always observe the safety instructions. These operating instruction is a part of the product; make sure you retain them for later use or subsequent owners.

The discharging power pack is maintenance free and operationally safe when used as intended.

The term “high voltage” is abbreviated HV in these operating instructions (e.g. HV terminal).

The illustrations in this document are a simplified representation of the product. They render only the technical facts and provide support for the text. Departures from the actual product may be noticeable. However, these deviations neither reduce the proper function nor mitigate the specifications of the product.

1.1 Symbols used in operating instructions



Always observe this safety instruction to avoid critical or fatal injuries.



Always observe this safety instruction to avoid damage to property.

NOTE:

Important notes and additional information.



Never dispose of with household garbage.




Caution, danger spot warning!

1.2 Symbols on the discharging power pack



WARNING!
High voltage

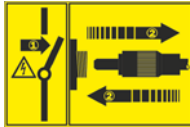

ATTENTION!

Only plug in/unplug the ionizing unit at the HV terminal when the discharging power pack is switched off.

2 Safety

Only the persons authorized by the operator may carry out tasks on the discharging power pack.

The installer must be a trained and qualified electrician and read the operating instructions in full.

The operator must read the operating instructions in full.

When working on the discharging power pack, switch off the voltage supply and secure against inadvertent switching on.



Hazards caused by manipulated or faulty discharging power pack

Unauthorized modifications, moisture or damage to the discharging power pack may result in electric shocks or fire hazards due to sparking.

- For reasons of safety, never open or modify the discharging power pack.
- In the event of visible damage or suspected electrical defects, take the discharging power pack out of operation immediately and secure against inadvertent reuse.
- Protect the discharging power pack from moisture.
- Never carry out any unauthorized repairs to the discharging power pack.
- Always switch off the discharging power pack after use.
- Do not keep any inflammable materials in the vicinity of the discharging power pack or its components.

2.1 Intended use

WARNING

Risk of explosion!

The discharging power pack may generate sparks which ignite gases, dust or similar substances.

- Never install or use the discharging power pack in areas with potentially explosive atmospheres.
-


The discharging power pack is intended exclusively for the supply of alternating high voltage to HAUG ionizing units with X-2000 connector. In combination with an ionizing unit, electrostatic charges are neutralized in a production process.

Always observe the installation and operating conditions indicated in these operating instructions.


Warranty only covers products, accessories or spare parts of HAUG GmbH & Co. KG.

3 Product overview

- A Fuse holder with fuse
(Replacing fuse, refer page 16)
- B Signalling lamp
- C Mains switch (lights up when discharging power pack is switched on)

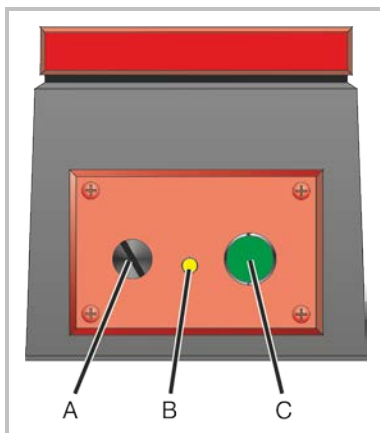

- D 4 x HV terminal
- E K1 signalling socket with jumper plug
- F Ground connection (terminal)
- G Mains supply

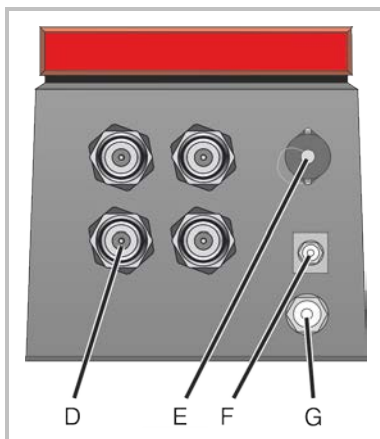

4 Install

WARNING

Risk of explosion!

The discharging power pack may generate sparks which ignite gases, dust or similar substances.

- Never install or use the discharging power pack in areas with potentially explosive atmospheres.

WARNING

Electric shock hazard!

An electric shock hazard results from a faulty connection of the discharging power pack to the power supply.

- The discharging power pack must only be installed by a trained and qualified electrician.

NOTICE

Damage to equipment!


Continuous overloading of the discharging power pack may result in failures.

- Never exceed the permissible connected length.
- Never install the discharging power pack on a surface generating or radiating heat.
- Never install at a location subject to direct solar irradiation.

1. Check the model plate of the discharging power pack against the ordering data. In the event of damage to the discharging power pack, contact HAUG GmbH & Co. KG.


2. Before connecting, make sure that the correct supply voltage is available for the discharging power pack.

- The model plate attached to the housing indicates the voltage.
- If the supply voltage is incorrect, the discharging power pack may be damaged.

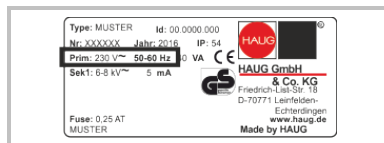


3. Place the discharging power pack at the desired location and attach with the enclosed retaining plate, if appropriate.


- The operation of the discharging power pack is not affected by the position in which it is installed.
- We recommend installing the discharging power pack with the HV terminals pointing downwards (to protect them from moisture, oil and dirt).

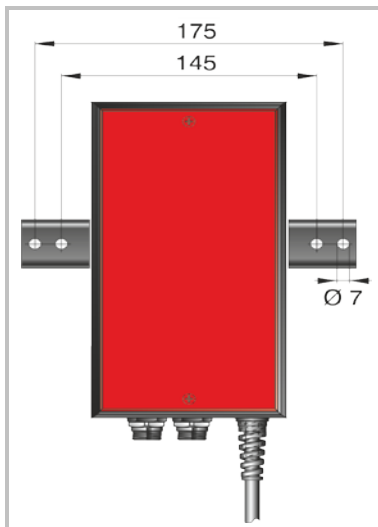


4. Ensure that the discharging power pack is switched off. The mains switch must be located at the top.

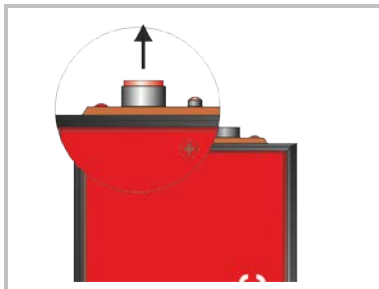

5. The ground socket of the discharging power pack must be connected to ground potential in line with applicable standards.
 - Grounding cables of at least 1,5 mm² must be used.

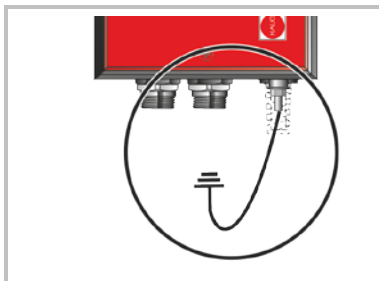

6. Connect the discharging power pack to the supply voltage. Always connect the protective earth conductor (green-yellow) with a functioning protective earth of the mains.
 - Connecting the PE conductor via parts of a machine body is insufficient.
 - L = brown conductor
 - N = blue conductor
 - PE = green/yellow conductor

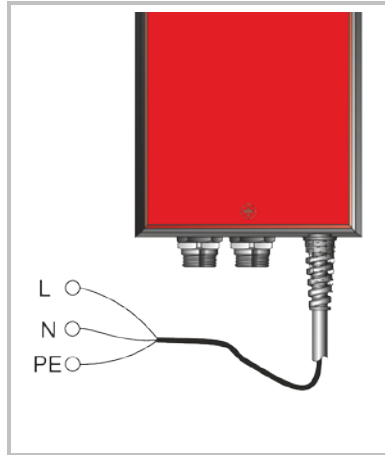**NOTICE**


Contact and separation spark-overs!

When the ionizing unit is plugged in or unplugged while the discharging power pack is switched on, spark-overs will occur at the HV connection. This may result in defects in the discharging power pack.

- Switch off discharging power pack before plugging in/unplugging ionizing unit.

7. Connect the ionizing unit to the HV terminal of the discharging power pack.


- Insert the ionizing unit's HV plug in the HV terminal of the discharging power pack and press the HV cable until it reaches the stop.
- Screw the screw cap onto the HV terminal and tighten by hand.

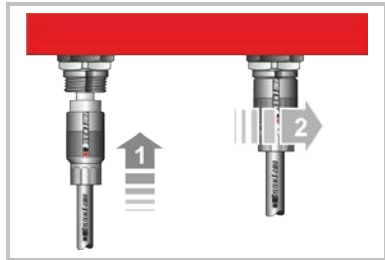**NOTE:**

Also note the maximum connected length.

Protect unused HV terminals against the ingress of environmental substances using the blind plugs.


8. If required, the signalling line K1 can be connected to the K1 signalling socket.
 - The K1 signalling socket allows to pulse the discharging power pack.

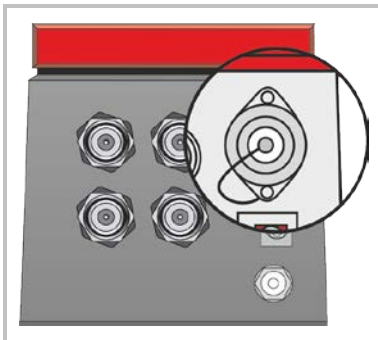

**Configuration of K1
signalling socket:**

A External pulse switch

Pin 1	Not assigned
Pin 2	Not assigned
Pin 3	Not assigned
Pin 4	Not assigned
Pin 5	Pulse input
Pin 6	Signal ground
Pin PE	Shield ground

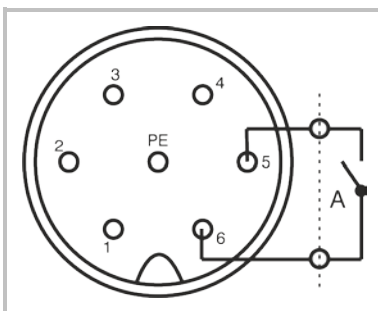

NOTE:

The external pulse switch must be a potential-free normally open contact.

9. The discharging power pack is ready for operation.

5 Operate

Preconditions:

The discharging power pack and the ionizing unit are connected and installed as specified in the operator instructions.

NOTE:

The discharging power pack only supplies HV on the HV terminal when the jumper plug is screwed onto the K1 signalling socket or the signalling line K1 is connected.

5.1 Normal operation

Operation of the discharging power pack without signalling line K1. The jumper plug must be screwed onto the signalling socket K1.

1. Switch on the discharging power pack using the mains switch.
 - The mains switch will illuminate to confirm.
 - The HV is switched on.
2. The signalling lamp lights up.
3. The discharging power pack is in operating mode.
4. In the event of a fault, the signalling lamp will extinguishes.
 - Carry out chapter troubleshooting. Refer page 15.

5.2 Operate over the signalling socket K1

The signalling line K1 is connected to the signalling socket K1 of the discharging power pack.

1. Switch on the discharging power pack using the mains switch.
 - The mains switch will illuminate to confirm.
2. Close the external pulse switch.
 - The HV at the HV terminal is switched on.
 - The signalling lamp lights up.
3. Open the external pulse switch.
 - The HV at the HV terminal is switched off.
 - The signalling lamp stays off.
4. The discharging power pack is in operating mode.

NOTE:

By opening and closing the external puls switch, the HV can be pulsed at the HV terminal (max. 1 Hz).

The signalling lamp shows the operating state. If the signalling lamp stays off, there is an fault. Carry out chapter troubleshooting. Refer page 15.

6 Troubleshooting

WARNING

Electric shock hazard!

The discharging power pack is operated electrically and generates a high electric voltage. In the event of any faults, there is a risk of an electric shock.

- Faults may only be eliminated by a trained and qualified electrician.

NOTE:

If the error cannot be removed in this way, return the discharging power pack and ionizing unit for checking to HAUG GmbH & Co. KG (the address is provided on the back of the envelope).

Fault	Cause	Troubleshooting
Ionisation not available	Mains failure	Check mains fuse
	No HV	Check fuse in discharging power pack.
		Check connections in discharging power pack.
		Check HV output of discharging power pack using the Combicheck (Accessories/spare parts, refer page 18).
	Discharging power pack is damaged	Shut the discharging power pack down immediately and secure against switching on.
	Ionizing unit is dirty	Clean ionizing unit
	Error in ionization system.	Perform work steps according to the following flow chart. Refer page 17..

6.1 Replacing fuse

NOTICE


Damage to equipment!

An incorrect fuse in the discharging power pack may cause a defect. This may result in a cable fire.

- Only use fuses of the specified type.
- Never use repaired fuses.
- Never bridge the fuse.

The unit type and the rated voltage are indicated on the nameplate.


1. Disconnect discharging power pack from supply.
2. Determine and remove the cause for the blown fuse.
3. Detach the fuse holder (A) using a screwdriver and lift out.
4. Replace fuse and reattach fuse holder.

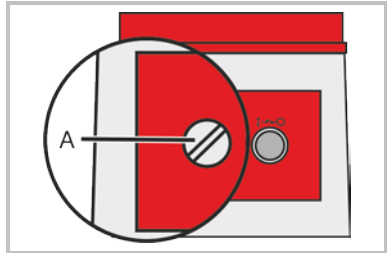

Use the following fuse only:



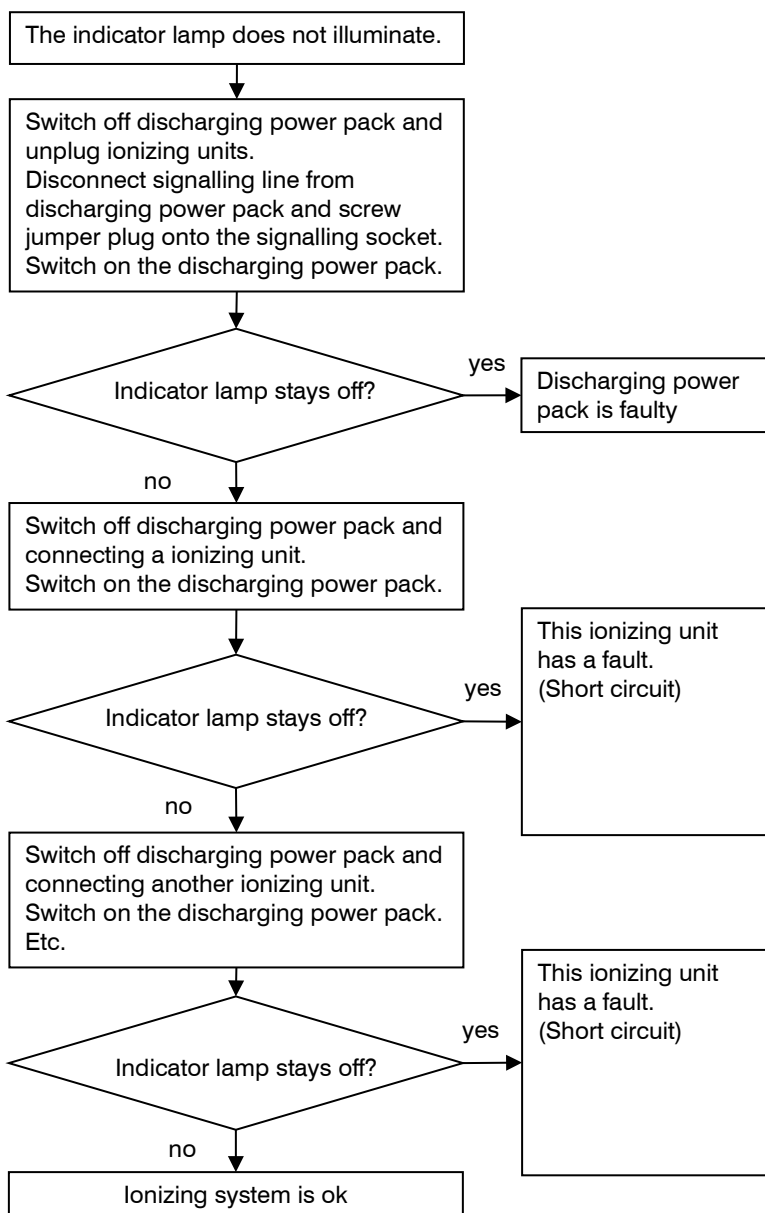

- 230 V = 0,25 A slow, 5 x 20 mm
- 230 V = 0,25 A slow, 5 x 20 mm

6.2 Flow chart



7 Accessories/spare parts

Accessories and spare parts can be sourced from your authorized sales partner or directly from HAUG GmbH & Co. KG (the address is provided on the back of the envelope).

Article	Illustrations	Order number
Circular plug (K1)		X – 0616
Right-angle plug (K1)		X – 5718
5 m shielded signalling line K1 with assembled plug		06.8941.000
10 m shielded signalling line K1 with assembled plug		06.8941.001
20 m shielded signalling line K1 with assembled plug		06.8941.002
Combicheck		12.7231.000
Blind plug for HV terminals		X – 3521

8 Technical data

8.1 Characteristics and specification

Reference temperature 23 °C

HV terminals	4
High-voltage	6,7 ±1 kV~
Short-circuit current:	
01.7854.001	$I_k < 3 \text{ mA}$
01.7854.000, 01.7855.000	$I_k < 5 \text{ mA}$
Max. pulse frequency	1 Hz

8.2 Supply voltage

Unit type	Nominal value	Frequency range	Power input
01.7854.000 01.7854.001	230 V~ ±10 %	50 – 60 Hz	$P_{\max} = 80 \text{ VA}$
01.7855.000	115 V~ ±10 %	50 – 60 Hz	$P_{\max} = 80 \text{ VA}$

8.3 Ambient conditions

Never use in areas with potentially explosive atmospheres.	
Use in interior only.	
Temperature:	
Rated application range	+5 °C to +45 °C
Extreme range for storage and transport	-15 °C to +60 °C
Humidity:	
Rated application range	20 % to 65 % RF
Extreme range for storage and transport	0 % to 85 % RF
Air pressure:	
Rated application range	800 mbar to 1060 mbar
Vibrations:	
Extreme range for storage and transport	max. 1.5 g (10 to 55 Hz), 1 h
Shock	max. 15 g in each direction
Recommended service position:	vertical, supply cable downwards

8.4 Connected lengths

Unit type	Permissible connected length	Maximum ionizing bar length Type A	Maximum ionizing bar length Type B
Discharging power pack	18 m	18 m	6 m

	Ionizing bar
Type A	EI RN, EI RNE, EI RA, EI RAE, EI RNOF, EI RAOF, EI HRN, EI HRA, EI HRE, EI HRAE, EI PS, EI PRX, EI PRV, EI SL, EIW
Type B	EI VS, EI VSE, EI VSA, EI VSAE, EI VC, EI VCA, EI VCE, EI VCAE, EI VSOF, EI VSAOF

Ionizing bar Type A:

The maximum cable length (KL) is the permissible connected length (AL) minus the connected ionizing bar length (SL).

$$KL = AL - SL$$

Ionizing bar Type B:

The maximum cable length (KL) is the permissible connected length (AL) minus 3 x the connected ionizing bar length (SL).

$$KL = AL - (3 \times SL)$$

8.5 Housing

Protection type	IP 54
Protection class	I
Mains supply	approx. 2,6 m fixed on unit
Dimensions:	
Height	245 mm
Width	130 mm
Depth	130 mm
Weight:	
	5 kg

9 Taking out of operation

WARNING

Electric shock hazard!

The discharging power pack is operated electrically and generates a high electric voltage. Improper decommissioning may result in electric shock.

- Decommissioning may only be carried out by a trained and qualified electrician.
-

1. Disconnect discharging power pack from supply.
2. Disconnect the mains line from the voltage supply.
3. Disconnect the ionizing unit from the HV terminal.
4. Disconnect the signalling line from the discharging power pack.
5. Remove the discharging power pack from the production process.

9.1 Storing

Always store our products in a dry and cool place.

9.2 Disposing



Never dispose of electrical appliances together with household garbage.

Always collect separately and dispose of in an environmentally responsible way. Always observe national and regional waste disposal regulations for the disposal of electrical appliances.

If proper disposal of our products is not possible, returning the units to us may be an option. We dispose of our products in an environmentally responsible way. The address is provided on the back of the envelope.





HAUG GmbH & Co. KG

Friedrich-List-Straße 18
D-70771 Leinfelden-Echterdingen
Telefon: +49 711 / 94 98-0
Telefax: +49 711 / 94 98-298

www.haug.de
E-Mail: info@haug.de

HAUG Biel AG

Johann-Renfer-Strasse 60
CH-2500 Biel-Bienne 6
Telefon: +41 32 / 344 96-96
Telefax: +41 32 / 344 96-97

www.haug.swiss
E-Mail: info@haug.swiss